

INSTRUCTION MANUAL

ITEM: LED WATERPROOF LAMP



! WARNING

- Turn power off before inspection, installation or removal.
- Supply connection and other external wiring conductor shall be at least 1.0 mm² and conform to 60245IEC57.

INTRODUCTION

Thank you for selecting and buying V-TAC LED Floodlights. V-TAC will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference. If you have any other query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best.


TECHNICAL SPECIFICATION

Model No.	VT-1250	VT-1550
Power	36W	48W
Lumens	2880LM	3920LM
Size	1200 x 76 x 66 mm	1500 x 76 x 66 mm
Beam Angle	120° D	
RA	>70	
IP Rating	IP65	
Input Voltage	AC 220-240V 50/60Hz	
Output Emergency Power	7Wmax	
Ambient Temp	50°Cmax	
Emergency Switch On Time	< 1 second	
Duration Time	3H	
Charging Time	24H	
Battery	9.6V 2200mAh Ni-Cd High Temp.	
The Battery Charging and Discharging Time	500 times	


LED Indicator	
ON	OFF
Battery in charging	Battery failure
Battery full power	

INSTALLATION INSTRUCTION:


- Fasten the two ceiling clips to installation surface.
- Open junction box cover of the body with screwdriver. (DWG1)
- Link to power source. (DWG2)
- Cover back to junction box cover.
- Install the lamp to the ceiling clips (DWG3)
- Hanging installation type. (DWG4)

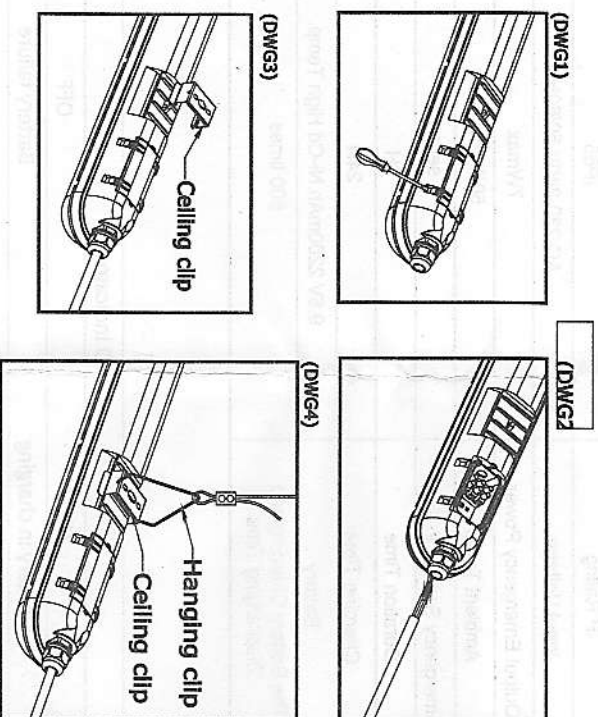

Dimension:

 

Wire Diagram:

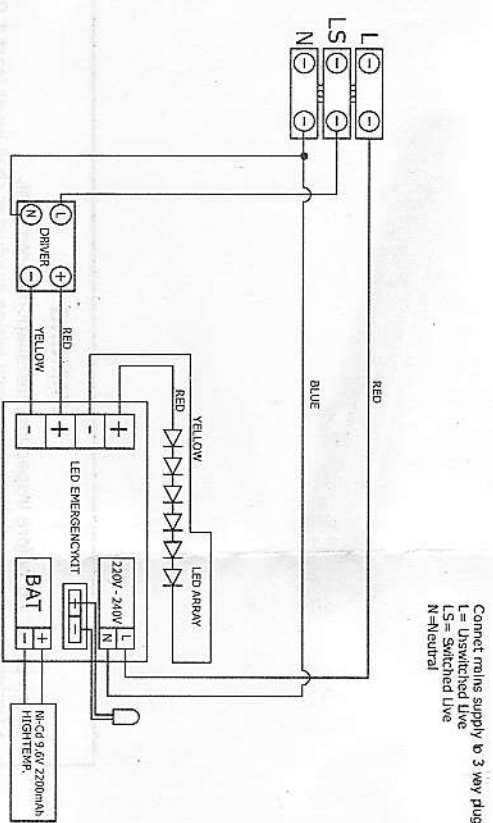

WARRANTY

- This product is warranted for manufacturing defects only.
- The warranty does not apply to damage caused by installation or abnormal wear and tear.
- The company gives no warranty against damage to any surface due to incorrect removal and installation of the product.
- The products are suitable for 10-12 Hours Daily operation. Usage of product for 24 Hours a day would void the warranty.